



Originale	Sostituto
Power CD	Power
Power	9
Power USB/Audio	Shift + Power
Open/Close	Eject / Surround
Bluetooth/FM	Shift + 9
CD	3
USB/Audio In	8
Album/Preset Up	Up
Album/Preset Up Bluetooth/FM	CH+ / Page+
Album/Preset Up USB/Audio In	Shift + Up
I<< CD	I<< / Preset-
I<< Bluetooth/FM	Shift + Left
I<< USB/Audio In	Left
Play CD	Play / Slow
Pause CD	Pause / Step / Freeze
Play/Pause USB/Audio In	Shift + Play /
>>I CD	>>I / Preset+

Originale	Sostituto
>>I Bluetooth/FM	Shift + >>I / Preset+
>>I USB/Audio In	Shift + I<< / Preset-
Album/Preset Down CD	Down
Album/Preset Down	CH- / Page-
Album/Preset Down USB/Audio	Shift + Down
Repeat	Green / APP / Repeat
Repeat USB/Audio	Back / Return
Vol+	Vol+
Stop CD	Stop / Hold
Stop USB/Audio In	Shift + Stop /
Vol-	Vol-
Shuffle	Blue / Prime Video / Random
Shuffle USB/Audio In	AV / Input / RDS
Mute	Mute / Dimmer
Display	Display / Media
Display USB/Audio In	Shift + Display / Media
Prog	TV/Radio /





	Originale	Sostituto	Originale	Sostituto
	Prog USB/Audio In	 + 		Shift + TV/Radio / Program
	Sound			Sound / Title
	Clock	 + 		Shift + Sleep / Timer
	Sleep/Timer			Sleep / Timer

