

 
 

 

 



 



 

 

 
 
 
 
 


 
 

 
 
 

 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Text	 Text
 Audio	 Dual
 Help	 D. Menu
 Back	 Back
 Subtitle	 Subt

Originale	Sostituto
 Info	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Menu	 Menu
 EPG	 Guide
 Vol +	 Vol +
 Vol -	 Vol -
 CH + / Page +	 Ch +
 CH - / Page -	 Ch -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue





Originale	Sostituto
 Rec	 Rec
 Stop	 Stop
 Play / Pause	 Play
 Play / Pause	 Pause
 Timer	 AV
 I<	 I<<
 <<	 <<
 >>	 >>
 >I	 >>I
 V.Mode	 Format
 TV	 TV/R
 Radio	 Shift + TV/R
 Sleep	 Sleep

Originale	Sostituto

