



Originale	Sostituto	Originale	Sostituto
	Power		Power
	Open/Close		Eject
	USB		Blue
	CD		Yellow
	Tuner		Green
	AUX		Red
	Vol-		Vol -
	Vol+		Vol +
	I<<		I<<
	>>I		>>I
	Album/Presets		Ch -
	Album/Presets		Ch +
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	Program	+	Shift + Sleep
	Clock/Display		Info

Originale	Sostituto	Originale	Sostituto
	Timer		AV
	Sleep		Sleep
	DBB		Dual
	DSC		Subt
	RDS/News		TV/R
	Mute		Mute
	Repeat		Text
	Shuffle		Format





Originale	Sostituto
Power	Power
Open/Close	Eject
USB	Blue
CD	Yellow
Tuner	Green
AUX	Red
Vol-	Vol -
Vol+	Vol +
I<<	I<<
>>I	>>I
Album/Preset	Ch -
Album/Preset	Ch +
Stop	Stop
Play / Pause	Play
Play / Pause	Pause
Program	SHIFT + PROG Sleep
Clock/Display	Info

Originale	Sostituto
Timer	AV
Sleep	Sleep
DBB	Dual
DSC	Subt
RDS/News	TV/R
Mute	Mute
Repeat	Text
Shuffle	Format





Originale		Sostituto		Originale		Sostituto	
	Power		Power		DBB		Dual
	Open/Close		Eject		DSC		Subt
	USB		Blue		RDS/News		TV/R
	CD		Yellow		Mute		Mute
	Tuner		Green				
	AUX		Red				
	Vol-		Vol -				
	Vol+		Vol +				
	I<<		I<<				
	>>I		>>I				
	Album/Preset		Ch -				
	Album/Preset		Ch +				
	Stop		Stop				
	Program		Shift + Sleep				
	Clock/Display		Info				
	Timer		AV				
	Sleep		Sleep				





Originale	Sostituto	Originale	Sostituto
USB	Blue		
CD	Yellow		
Tuner	Green		
AUX	Red		
Open/Close	Eject		
Power	Power		
Vol+	Vol +		
Vol-	Vol -		
Clock/Display	Info		
Timer	AV		
Sleep	Sleep		
DBB	Dual		
DSC	Subt		
RDS/News	TV/R		
Mute	Mute		

