



 


 



 
 

 
 


 












 

 

 


 
 
 


 
 


 


 
 
 
 
 

 
 
 

 
 


 







Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Source / AV		AV
	TV / Radio		TV/R		Info		Info
	TV Guide		Guide		Up		Up
	Mute		Mute		Right		Right
	ATV		Shift + Smart		Down		Down
	USB		Media		Left		Left
	DVD		Smart		OK		Ok
	Eject		Eject		Menu		Menu
	Rec		Rec		Exit		Exit
	Rec List		Shift + Rec		1		1
	I<<		I<<		2		2
	>>I		>>I		3		3
	Stop		Stop		4		4
	<<		<<		5		5
	>>		>>		6		6
	Play / Pause		Play		7		7
	Play / Pause		Pause		8		8





Originale	Sostituto	Originale	Sostituto
	9		9
	0		0
	Recall		Back
	Fav		Pre Ch
	Vol +		Vol +
	Vol -		Vol -
	Subtitle		Subt
	Aspect		Format
	Audio		Dual
	Sleep		Sleep
	CH +		Ch +
	CH -		Ch -
	Red / Goto		Red
	Green / A-B		Green
	Yellow / Angle		Yellow
	Blue / Repeat		Blue
	Blue / Repeat		Shift + Text

Originale	Sostituto	Originale	Sostituto
	D.Dis		Shift + Info
	Zoom		Shift + Eject
	Size		3D
	Display (Power)		Shift + Power
	Text / D.Setup		Text
	Text / D.Setup		Options
	Index / D.Menu		D. Menu
	Reveal / Title		List
	Hold		Shift + Pause

