


 



 


















 



 




 



 





Originale	Sostituto
	 Power
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 I<< / Preset-
	 Pause / Step / Freeze
	 >>I / Preset+
	 Info / Angle
	 Stop / Hold
	 Rec / Rec Mode
	 Subtitle / EQ
	 Exit / Cancel / Clear
	 Menu / Home

Originale	Sostituto
	 Left
	 Up
	 Right
	 CH+ / Page+
	 OK
	 CH- / Page-
	 Down
	 Smart / List
	 Back / Return
	 Guide / EPG / -/--
	 1
	 2
	 3
	 4
	 5
	 6
	 7





Originale		Sostituto	
	8		8
	9		9
	0		0
	PVR		Display / Media
	Page Up		Shift + CH+ /
	Page Down		Shift + CH- /

Originale	Sostituto

