



Originale	Sostituto
Standby	Power
Mute	Mute / Dimmer
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Rec	Rec / Rec Mode
<<<	<<< / Tune-
>>>	>>> / Tune+
I<<<	I<<< / Preset-
>>I	>>I / Preset+
S.Mode	Sound / Title
Audio/Tv/Radio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Eject/Auto	Eject / Surround
P.Mode	Picture / Format
Zoom/Hold	Zoom / Size
Sleep	Sleep / Timer

Originale	Sostituto
D.Menu/Index	D.Menu / Top
Goto/Subpage	Text / Goto
Source	AV / Input / RDS
Menu	Menu / Home
Up	Up
Angle/Text	Info / Angle
Left	Left
OK	OK
Right	Right
Exit	Exit / Cancel / Clear
Down	Down
Recall	Back / Return
Vol+	Vol+
CH+	CH+ / Page+
Vol-	Vol-
Display	Display / Media
CH-	CH- / Page-





Originale	Sostituto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
EPG	Guide / EPG / -/--
0	0
FAV	Fav / Marker / PC
Red / Del / Prog	Red / Netflix / Search
Green / Rename	Green / APP / Repeat
Yellow / Move / Repeat	Yellow / YouTube / Repeat
Blue / Skip / A-B	Blue / Prime Video / Random
I>/Lang	Shift + >>1 / Preset+

Originale	Sostituto
Nicam	Shift + Sound / Title
Audio/Tv/Radio	Shift + Audio / Lang I/II
Aspect	Shift + Picture / Format
Title/Size	Shift + Zoom /
D.Disp/Reveal	Shift + D.Menu / Top Menu
I>/Lang	Shift + Right
DVD Setup	Shift + 2
FAV+	Shift + 9
-/--	Shift + Guide / EPG / -/--
FAV-	Shift + Fav / Marker / PC

