





 


 





















 

 




 

 





 
 





 



 



 









Originale		Sostituto		Originale		Sostituto	
	DVD Power		Power		Manual Skip		Shift + Right
	Drive Select		D. Menu		I<< Skip		I<<
	1		1		Skip >>I		>>I
	2		2		<< / Slow/Search		<<
	3		3		>> / Slow/Search		>>
	4		4		Stop		Stop
	5		5		Pause		Pause
	6		6		Play		Play
	7		7		Status / i		Info
	8		8		Exit		Exit
	9		9		Direct Navigator		Media
	0		0		Function Menu		Menu
	Delete *		Shift + Exit		Guide		Guide
	Input Select		AV		Up		Up
	CH+		Ch +		Down		Down
	CH-		Ch -		Right/II>		Right
	Prog/Check		Smart		Left/<II		Left





Originale	Sostituto
OK	Ok
Option	Options
Return	Back
Red	Red
Green	Green
Yellow/Create Chapter	Yellow
Blue	Blue
Rec	Rec
Rec Mode	Shift + Rec
Audio	Dual
Direct Tv Rec	TV/R
Text	Text
STTL	Subt
Display	Shift + Info
Time Slip	Sleep
TV Power	Shift + Power
TV AV	Shift + AV

Originale	Sostituto
TV CH +	Shift + Ch +
TV CH -	Shift + Ch -
TV Vol +	Vol +
TV Vol -	Vol -

