

 
 



 

 

 



 
 
 

 
 

 


 




 

 














 



 



 

 


 



 







Originale		Sostituto		Originale		Sostituto	
	Standby / On		Power		ShowView		Smart
	VCR Eject		Shift + Exit		Cancel		Exit
	DVD Open / Close		Eject		Title Menu / Top Menu		Menu
	DVD / VCR		Media		Up / CH +		Up
	1		1		Up / CH +		Ch +
	2		2		Down / CH -		Down
	3		3		Down / CH -		Ch -
	4		4		Right / TRK +		Right
	5		5		Left / TRK -		Left
	6		6		Enter		Ok
	7		7		DVD Menu		D. Menu
	8		8		Setup		Options
	9		9		Stop		Stop
	0		0		Play		Play
	Return		Back		Pause / Still		Pause
	Timer Rec		Shift + AV		I<< Skip / Index -		I<<
	Input Select		AV		<< Rew / Search		<<





Originale	Sostituto
>> F.Fwd /	>>
>>I Skip / Index	>>I
One Touch	Text
CM Skip	Format
Slow I>	+ Shift + >>
Rec	Rec
Rec Mode / Speed	+ Shift + Rec
Dubbing	3D
Audio / Audio select	Dual
Display	Info
Zoom	+ Shift + Eject
Repeat A-B	+ Shift + Text
Zero Return	+ Shift + Back
Counter Reset / Angle	Sleep
Subtitle / ATR	Subt
Play Mode /	+ Shift + Play
Clock Counter	Mute

Originale	Sostituto
TV / VCR	TV/R

