



| Originale   | Sostituto   | Originale   | Sostituto   |
|---|---|---|---|
|  Standby           |  Power                       |  >>  / Subpage |  >>  / Preset+         |
|  Source            |  AV / Input / RDS            |  Menu          |  Menu / Home           |
|  Red               |  Red / Netflix / Search      |  Exit          |  Exit / Cancel / Clear |
|  Green             |  Green / APP / Repeat        |  Up            |  Up                    |
|  Yellow            |  Yellow / YouTube / Repeat   |  Left          |  Left                  |
|  Blue              |  Blue / Prime Video / Random |  Enter         |  OK                    |
|  P.Mode            |  Picture / Format            |  Right         |  Right                 |
|  S.Mode            |  Sound / Title               |  Play / Pause  |  Play / Slow           |
|  Freeze            |  Pause / Step / Freeze       |  Down          |  Down                  |
|  Txt               |  Text / Goto                 |  Stop          |  Stop / Hold           |
|  Mix / Fav. List  |  Fav / Marker / PC          |  Vol +        |  Vol+                 |
|  Size / Subtitle |  Subtitle / EQ             |  Mute        |  Mute / Dimmer       |
|  Cancel / Audio  |  Audio / Lang I/II         |  CH +        |  CH+ / Page+         |
|  Zoom            |  Zoom / Size               |  Vol -       |  Vol-                |
|  << / Index      |  << / Tune-                |  TV / Radio  |  TV/Radio /          |
|  >> / Hold       |  >> / Tune+                |  CH -        |  CH- / Page-         |
|  I<< / Reveal    |  I<< / Preset-             |  1           |  1                   |



