






 

 

 



 
 


 



 













 



 

 



 


 
 



 
















Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Tv/Radio		TV/R
	Source		AV		Display		Info
	1		1		Menu		Menu
	2		2		Exit		Exit
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Vol+		Vol +
	9		9		Vol-		Vol -
	0/10		0		Mute		Mute
	FAV/Program		Pre Ch		EPG		Guide
	Recall/10+		Back		Media		Media
	P.Mode		Format		CH+		Ch +
	S.Mode		Shift + Dual		CH-		Ch -
	Sleep		Sleep		Rec		Rec





Originale	Sostituto
T.SHIFT	HOME SMART Smart
AUDIO I/II	SOUND DUAL Dual
ASPECT SIZE	ECO 3D 3D
D.SETUP	SETTINGS OPT Options
D.MENU	E-MANUAL D.MENU D. Menu
TITLE	REPEAT TEXT Text
EJECT	ZOOM Eject
HOLD	PLAY MODE Play
HOLD	Pause/Hold
REVEAL	Stop
TEXT	<</Text
SUBPAGE	>>/Subpage
INDEX	I<</Index
MIX	>>I/Mix
ZOOM	SHIFT + ZOOM Shift + Eject
SUBTITLE	AD SUBT Subt
GOTO	A Red

Originale	Sostituto
A-B	B Green
ANGLE	C Yellow
REPEAT	D Blue

