



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Search	 TV/R
 Open / Close	 Eject	 Setup	 Options
 1	 1	 Title	 List
 2	 2	 Up	 Up
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Left	 Left
 6	 6	 Enter	 Ok
 7	 7	 PBC	 Smart
 8	 8	 Menu	 Menu
 9	 9	 Audio	 Dual
 0	 0	 Zoom	 Shift + Eject
 10 +	 Guide	 USB / Card	 Media
 Display	 Info	 Step II >	 Shift + Pause
 Subtitle	 Subt	 Stop	 Stop
 Vol +	 Vol +	 Play / Pause	 Play
 Vol -	 Vol -	 Play / Pause	 Pause





Originale		Sostituto	
	I << Prev		I <<
	Next >>I		>>I
	<< Rev		<<
	Fwd >>		>>
	L / R		Shift + Dual
	N / P		3D
	Angle		Format
	Mute		Mute
	Program		Sleep
	Clear		Exit
	Repeat		Text
	A - B		Shift + Text
	V - Mode		Green
	TV - Mode		Yellow
	Slow		Shift + Play
	Return		Back

Originale	Sostituto

