



































| Originale    | Sostituto   | Originale  | Sostituto   |
|--------------|---|------------|---|
| On/Off       |  Power                 | Menu       |  Menu / Home           |
| Audio Off    |  Mute / Dimmer         | Menu Up    |  Up                    |
| Play         |  Play / Slow           | Auto/Track |  Info / Angle          |
| Pause        |  Pause / Step / Freeze | Menu Left  |  Left                  |
| Stop         |  Stop / Hold           | OK Enter   |  OK                    |
| Record       |  Rec / Rec Mode        | Menu Right |  Right                 |
| Rewind       |  << / Tune-            | C/CH       |  Exit / Cancel / Clear |
| F.Forward    |  >> / Tune+            | Menu Down  |  Down                  |
| Prev.        |  I<< / Preset-         | Return     |  Back / Return         |
| Next         |  >>I / Preset+         | Volume+    |  Vol+                  |
| Title        |  Sound / Title       | DVD/TV     |  Smart / List        |
| Subt.        |  Subtitle / EQ       | Slow Up    |  CH+ / Page+         |
| Open/Close   |  Eject / Surround    | Volume-    |  Vol-                |
| Zoom         |  Zoom / Size         | Display    |  Display / Media     |
| Progr.       |  TV/Radio /          | Slow Down  |  CH- / Page-         |
| Top Menu     |  D.Menu / Top        | 1          |  1                   |
| Input Source |  AV / Input / RDS    | 2          |  2                   |



