














































Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Menu	 Menu / Home
Audio Off	 Mute / Dimmer	Menu Up	 Up
Play	 Play / Slow	Auto/Track	 Info / Angle
Pause	 Pause / Step / Freeze	Menu Left	 Left
Stop	 Stop / Hold	OK Enter	 OK
Record	 Rec / Rec Mode	Menu Right	 Right
Rewind	 << / Tune-	C/CH	 Exit / Cancel / Clear
F.Forward	 >> / Tune+	Menu Down	 Down
Prev.	 I<< / Preset-	Return	 Back / Return
Next	 >>I / Preset+	Volume+	 Vol+
Title	 Sound / Title	DVD/TV	 Smart / List
Subt.	 Subtitle / EQ	Slow Up	 CH+ / Page+
Open/Close	 Eject / Surround	Volume-	 Vol-
Zoom	 Zoom / Size	Display	 Display / Media
Progr.	 TV/Radio /	Slow Down	 CH- / Page-
Top Menu	 D.Menu / Top	1	 1
Input Source	 AV / Input / RDS	2	 2



Originale	Sostituto	Originale	Sostituto
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
+10	 Guide / EPG / -/--		
0	 0		
Mark	 Fav / Marker / PC		
Repeat/1/All	 Green / APP / Repeat		
Rep/A-B	 Yellow / YouTube / Repeat		

Originale	Sostituto

