



Originale	Sostituto
	Mute / Dimmer
	Power
	Display / Media
	Guide / EPG / -/--
	Sleep / Timer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Zoom / Size
	0
	AV / Input / RDS

Originale	Sostituto
	Setup / OPT /
	Picture / Format
	TV/Radio /
	Smart / List
	Rec / Rec Mode
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Red / Netflix / Search
	Up
	Blue / Prime Video / Random
	Left
	OK
	Right
	Exit / Cancel / Clear
	Info / Angle
	Down
	<< / Tune-







 

 

 

 

 

 

 

 

 

 

 



 







 

 

 

 

 



 


 
 
 
 

 

 
 




 





Originale	Sostituto
Stop	Stop / Hold
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
>>	>> / Tune+
Prog -	CH- / Page-
Prog +	CH+ / Page+
Volume -	Vol-
Volume +	Vol+
TXT	Text / Goto
Still	Shift + Pause / Step /
Sound	Sound / Title
PIP	D.Menu / Top
Menu	Menu / Home
HDMI	Shift + 0

Originale	Sostituto





 



Originale	Sostituto
	 Mute / Dimmer
	 Power
	 Fav / Marker / PC
	 Smart / List
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Zoom / Size
	 0
	 AV / Input / RDS

Originale	Sostituto
	 Setup / OPT /
	 Display / Media
	 TV/Radio /
	 D.Menu / Top
	 Rec / Rec Mode
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Red / Netflix / Search
	 Up
	 Blue / Prime Video / Random
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Info / Angle
	 Down
	 << / Tune-





Originale	Sostituto	Originale	Sostituto
	 Stop / Hold		
	 Play / Slow		
	 >> / Tune+		
	 CH- / Page-		
	 CH+ / Page+		
	 Vol-		
	 Vol+		
	 Text / Goto		
	 Pause / Step / Freeze		
	 Sound / Title		
	 Picture / Format		
	 Menu / Home		
	 Shift + 0		



 









 

 

 

 



 
 

 

 

 
 
 


Originale	Sostituto		
	Mute		Mute / Dimmer
	Power		Power
	More		Display / Media
	?		Guide / EPG / -/--
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Zoom		Zoom / Size
	0 / AV		0
	0 / AV		AV / Input / RDS

Originale	Sostituto		
	OPT		Setup / OPT /
	SFI		Picture / Format
	TV / Radio		TV/Radio /
	Genre		Smart / List
	Rec		Rec / Rec Mode
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Red		Red / Netflix / Search
	Up		Up
	Blue		Blue / Prime Video / Random
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	Down		Down
	<<		<< / Tune-





Originale	Sostituto
	 Stop / Hold
	 Play / Slow
	 Pause / Step / Freeze
	 >> / Tune+
	 CH- / Page-
	 CH+ / Page+
	 Vol-
	 Vol+
	 Text / Goto
	 +  Shift + Pause / Step /
	 Sound / Title
	 D.Menu / Top
	 Menu / Home
	 +  0 Shift + 0

Originale	Sostituto

