



 



 



 

 



 

 



 



 













































 

 




 







 



 









 



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Down		Down
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Picture		Picture / Format		1		1
	Sound		Sound / Title		2		2
	Aspect		Shift + Picture / Format		3		3
	Sleep		Sleep / Timer		4		4
	Subtitle		Subtitle / EQ		5		5
	CH. List		Smart / List		6		6
	EPG		Guide / EPG / -/--		7		7
	FAV		Fav / Marker / PC		8		8
	TV / Radio		TV/Radio /		9		9
	Up		Up		0		0
	Input		AV / Input / RDS		Recall		Back / Return
	Left		Left		Info		Info / Angle
	OK		OK		Vol +		Vol+
	Right		Right		Rec		Rec / Rec Mode
	Menu		Menu / Home		Rec. List		Display / Media





Originale	Sostituto
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 CH -	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 TV / TXT	 Text / Goto
 Cancel	 Shift + Exit / Cancel / Clear
 Reveal	 Eject / Surround
 Nicam / A2	 Audio / Lang I/II
 << / Index	 << / Tune-
 >> / Hold	 >> / Tune+
 I<< / Size	 I<< / Preset-

Originale	Sostituto
 >>I / Subpage	 >>I / Preset+

