
























Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II

Originale	Sostituto
 Menu	 Menu / Home
 Info	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Source	 AV / Input / RDS
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Home	 Shift + Menu /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mouse	 Smart / List
 CH-	 CH- / Page-
 EPG	 Guide / EPG / -/-
 Aspect	 Shift + Picture / Format





Originale	Sostituto
Sleep	Sleep / Timer
Rec	Rec / Rec Mode
Tv/Radio	TV/Radio /
Freeze	Shift + Pause / Step /
Sub-T	Subtitle / EQ
Rec.List	Shift + Rec / Rec Mode
Angle	Shift + Info / Angle
TTX	Text / Goto
Hold	Shift + Stop /
Reveal	Shift + Back / Return
Sub-P	Setup / OPT /
Eject/Index	Eject / Surround
Zoom	Zoom / Size
Play	Play / Slow
Pause/TSR	Pause / Step / Freeze
Stop/Auto	Stop / Hold
<<<	<<< / Tune-

Originale	Sostituto
>>>	>>> / Tune+
<<<	<<< / Preset-
>>>	>>> / Preset+
Red/D.Setup	Red / Netflix / Search
Green/D.Menu	Green / APP / Repeat
Yellow/D.Title	Yellow / YouTube / Repeat
Blue/Repeat	Blue / Prime Video / Random

