



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV / R	TV/Radio /
0	0
Home	Shift + Menu /
Fav	Fav / Marker / PC
Back	Back / Return
Audio	Audio / Lang I/II

Originale	Sostituto
Info	Info / Angle
EPG	Guide / EPG / -/-
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Vol +	Vol+
P +	Shift + CH+ /
CH +	CH+ / Page+
Vol -	Vol-
List	Smart / List
CH -	CH- / Page-
P -	Shift + CH- /
OPT	Setup / OPT /





Originale	Sostituto
Text	Text / Goto
Sub.	Subtitle / EQ
Message	Display / Media
Pause	Pause / Step / Freeze
<<<	<<< / Tune-
>>>	>>> / Tune+
Rec	Rec / Rec Mode
Play	Play / Slow
I<<<	I<<< / Preset-
>>>I	>>>I / Preset+
Stop	Stop / Hold
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Originale	Sostituto

