 

 

 



 




 









 



 

 





Originale	Sostituto
 Standby	 Power
 Info	 Info / Angle
 Subtitle	 Subtitle / EQ
 Mute	 Mute / Dimmer
 I<<	 I<< / Preset-
 Play	 Play / Slow
 <<	 << / Tune-
 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Menu	 Menu / Home
 Up	 Up
 CH+	 CH+ / Page+
 Exit	 Exit / Cancel / Clear
 Vol-	 Vol-
 Left	 Left
 OK	 OK

Originale	Sostituto
 Right	 Right
 Vol+	 Vol+
 Record	 Rec / Rec Mode
 CH-	 CH- / Page-
 Down	 Down
 Stop	 Stop / Hold
 1	 1
 2	 2
 3	 3
 EPG	 Guide / EPG / -/-
 4	 4
 5	 5
 6	 6
 Back	 Back / Return
 7	 7
 8	 8
 9	 9







 




Originale		Sostituto	
	0		0
	Media		Display / Media
	USB	 + 	Shift + 8
	Tv/Radio		TV/Radio /
	Audio		Audio / Lang I/II
	TTX		Text / Goto
	Timer		Sleep / Timer
	FAV		Fav / Marker / PC
	Res		Smart / List
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originale		Sostituto	





Originale	Sostituto
 Standby	 Power
 Info	 Info / Angle
 Subtitle	 Subtitle / EQ
 Mute	 Mute / Dimmer
 I<<	 I<< / Preset-
 Play	 Play / Slow
 <<	 << / Tune-
 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Menu	 Menu / Home
 Up / CH+	 CH+ / Page+
 Up / CH+	 Up
 Exit	 Exit / Cancel / Clear
 Left / Vol-	 Vol-
 Left / Vol-	 Left
 OK	 OK

Originale	Sostituto
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 Record	 Rec / Rec Mode
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 Stop	 Stop / Hold
 1	 1
 2	 2
 3	 3
 EPG	 Guide / EPG / -/-
 4	 4
 5	 5
 6	 6
 Back	 Back / Return
 7	 7
 8	 8
 9	 9





Originale	Sostituto
0	0
MEDIA	Display / Media
USB	SHIFT + 8 Shift + 8
TV/RADIO	TV/Radio /
AUDIO	Audio / Lang I/II
TTX	Text / Goto
TIMER	Sleep / Timer
FAV	Fav / Marker / PC
RES.	Smart / List
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Originale	Sostituto

