

 




 

 

 















 

 
 









 
 
 

 
 
 
 

 

 
 


 
 
 
 

 

 


 





Originale	Sostituto
 Power	 Power
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Back
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Originale	Sostituto
 Blue	 Blue
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Mute	 Mute
 TXT	 Text
 Aspect	 Format
 Nicam	 Shift + 3D
 Display	 Info
 Sleep	 Sleep
 Up / PR +	 Up
 Up / PR +	 Ch +
 Down / PR -	 Down
 Down / PR -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -





Originale	Sostituto
 Enter	 Ok
 Source	 AV
 Menu	 Menu
 Stop / Hold	 Stop
 Play/Pause / Mix	 Play
 Play/Pause / Mix	 Pause
 Subpage	 Shift + Subt
 Goto / Size	 Smart
 Angle / Index	 3D
 Media / Reveal	 Media
 DVD Menu / DTV/Radio	 TV/R
 DVD Menu / DTV/Radio	 D. Menu
 Up / I<<< / List	 Shift + Up
 Up / I<<< / List	 List
 Up / I<<< / List	 I<<<
 Repeat / EPG	 Guide
 Left / <<< / Page Down	 Shift + Left

Originale	Sostituto
 A-B / FAV	 Pre Ch
 Left / <<< / Page Down	 <<<
 Setup	 Options
 Right / >>> / Page Up	 Shift + Right
 Right / >>> / Page Up	 >>>
 Setup	 Shift + Ok
 Zoom / Still	 Shift + Eject
 Language	 Dual
 Title	 Shift + Info
 Down / >>>I	 Shift + Down
 Down / >>>I	 >>>I
 Subtitle	 Subt

