 



 

 

 

 

 





 



 



 
 





 




Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Originale	Sostituto	Originale	Sostituto
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-





 

 

 

 









 



 

 

 

 







Originale	Sostituto
Green / >>	>> / Tune+
Green / >>	Green / APP / Repeat
Yellow / I<<	I<< / Preset-
Yellow / I<<	Yellow / YouTube / Repeat
Blue / >>	Blue / Prime Video / Random
Blue / >>	>>  / Preset+
Text / Play/Pause	Text / Goto
Text / Play/Pause	Pause / Step / Freeze
Text / Play/Pause	Play / Slow
Stop / Still	Stop / Hold
Timer / Subtitle	Subtitle / EQ
Size / Aspect	Zoom / Size
Cancel [≡X]	Shift + Exit / Cancel / Clear
Radio	TV/Radio /
Audio / I/II	Audio / Lang I/II
Rec	Rec / Rec Mode

Originale	Sostituto





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [≡?]/Source	 AV / Input / RDS
 0	 0
 [≡i]/Info	 Info / Angle
 DMP	 D.Menu / Top
 Up	 Up
 EPG	 Guide / EPG / -/--

Originale	Sostituto
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 List	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 ♥	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 Index	 Display / Media
 Back	 Back / Return
 Red	 Red / Netflix / Search
 <<	 << / Tune-





Originale	Sostituto
	Green / APP / Repeat
	>> / Tune+
	Yellow / YouTube / Repeat
	I<< / Preset-
	Blue / Prime Video / Random
	>>  / Preset+
	Play / Slow
	Pause / Step / Freeze
	Text / Goto
	Stop / Hold
	Picture / Format
	Subtitle / EQ
	Zoom / Size
	Setup / OPT /
	Radio TV/Radio /
	Audio / Lang I/II
	Rec / Rec Mode

Originale	Sostituto

