



 

 

 



 

 

 

 


 







 





 





 

 



 



 

 

 

 












Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Menu	 Menu / Home
 3	 3	 Down	 Down
 4	 4	 Exit	 Exit / Cancel / Clear
 5	 5	 Vol +	 Vol+
 6	 6	 List	 Smart / List
 7	 7	 CH +	 CH+ / Page+
 8	 8	 Vol -	 Vol-
 9	 9	 CH -	 CH- / Page-
 Source	 AV / Input / RDS	 Fav	 Fav / Marker / PC
 0	 0	 Sleep	 Sleep / Timer
 Info	 Info / Angle	 Index	 Display / Media
 DMP	 D.Menu / Top	 Recall	 Back / Return
 Up	 Up	 Red / <<	 Red / Netflix / Search
 EPG	 Guide / EPG / -/-	 Red / <<	 << / Tune-

Originale	Sostituto	Originale	Sostituto
 Left	 Left	 Left	 Left
 Right	 Right	 Right	 Right
 Menu	 Menu / Home	 Menu	 Menu / Home
 Down	 Down	 Down	 Down
 Exit	 Exit / Cancel / Clear	 Exit	 Exit / Cancel / Clear
 Vol +	 Vol+	 Vol +	 Vol+
 List	 Smart / List	 List	 Smart / List
 CH +	 CH+ / Page+	 CH +	 CH+ / Page+
 Vol -	 Vol-	 Vol -	 Vol-
CH -	CH- / Page-	CH -	CH- / Page-
Fav	Fav / Marker / PC	Fav	Fav / Marker / PC
Sleep	Sleep / Timer	Sleep	Sleep / Timer
Index	Display / Media	Index	Display / Media
Recall	Back / Return	Recall	Back / Return
Red / <<	Red / Netflix / Search	Red / <<	Red / Netflix / Search
Red / <<	<< / Tune-	Red / <<	<< / Tune-











 

 



 

 

 





 

 

 







 







 



 

 

 

 

 













Originale	Sostituto	Originale	Sostituto
 Green / >>	 >> / Tune+		
 Green / >>	 Green / APP / Repeat		
 Yellow / I<<	 I<< / Preset-		
 Yellow / I<<	 Yellow / YouTube / Repeat		
 Blue / >>	 Blue / Prime Video / Random		
 Blue / >>	 >>  / Preset+		
 Text / Play/Pause	 Text / Goto		
 Text / Play/Pause	 Pause / Step / Freeze		
 Text / Play/Pause	 Play / Slow		
 Stop / Still	 Stop / Hold		
 Timer / Subtitle	 Subtitle / EQ		
 Size / Aspect	 Zoom / Size		
 Cancel [≡X]	 +  Shift + Exit / Cancel / Clear		
 Radio	 TV/Radio /		
 Audio / I/II	 Audio / Lang I/II		
 Rec	 Rec / Rec Mode		







Originale		Sostituto		Originale		Sostituto	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-





	Originale	Sostituto	Originale	Sostituto
	Green	Green / APP / Repeat		
	>>	>> / Tune+		
	Yellow	Yellow / YouTube / Repeat		
	I<<	I<< / Preset-		
	Blue	Blue / Prime Video / Random		
	>>I	>>I / Preset+		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	[≡]	Text / Goto		
	Stop/Still	Stop / Hold		
	[≡+]	Picture / Format		
	[≡o]/Subtitle	Subtitle / EQ		
	[≡◇]/[+]	Zoom / Size		
	[≡x]	Setup / OPT /		
	Radio	TV/Radio /		
	Audio	Audio / Lang I/II		
	Rec	Rec / Rec Mode		

