





 




 


 
 


 



 








 
 

 
 











 





 





 
 
 

 



 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Prog/EPG	 Shift + TV/Radio / Program
 Open/Close	 Eject / Surround	 Title/TTX	 Text / Goto
 1	 1	 Title/TTX	 Sound / Title
 2	 2	 Vol+	 Vol+
 3	 3	 Goto	 Shift + Text /
 4	 4	 PBC	 Picture / Format
 5	 5	 Vol-	 Vol-
 6	 6	 Pause	 Pause / Step / Freeze
 7	 7	 Play	 Play / Slow
 8	 8	 Stop	 Stop / Hold
 10+	 Shift + Guide / EPG / -/-	 Setup	 Setup / OPT /
 9	 9	 Return	 Back / Return
 0	 0	 Source	 AV / Input / RDS
 Display	 Display / Media	 Tv/Radio	 TV/Radio /
 Mute	 Mute / Dimmer	 Up	 Up
 Menu	 Menu / Home	 Down	 Down
 Prog/EPG	 Guide / EPG / -/-	 Enter	 OK

Originale	Sostituto	Originale	Sostituto
 Power	 Dimmer / Mute	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	
 HOME	 ANGLE	 INFO	
 MENU	 OK	 RETURN	
 CLEAR	 EXIT	 BACK	
 CANCEL	 LIST	 CH PAGE	
 VOL+	 SMART	 MEDIA	
 VOL-	 DISPLAY	 TV	 DVD
 1	 2	 CD-8TB	
 VIDEO	 TAPE	 TUNER	
 4	 5	 6	
 AUX-HDD	 USB	 BLUETOOTH	
 7	 8	 9	
 GUIDE EPG	 HDMI-SAT	 PC	
 NETFLIX	 APP	 YouTube	 Prime Video
 SEARCH	 REPEAT	 REPEAT A-B	 RANDOM
			
www.mandis.tv			



