


 

 
 



 
 






 





Originale	Sostituto
 Power	 Power
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 10+	 Shift + Guide / EPG / -/-
 9	 9
 0	 0
 Display	 Display / Media
 Mute	 Mute / Dimmer
 Menu	 Menu / Home
 Prog/EPG	 Guide / EPG / -/-

Originale	Sostituto
 Prog/EPG	 Shift + TV/Radio / Program
 Title/TTX	 Text / Goto
 Title/TTX	 Sound / Title
 Vol+	 Vol+
 Goto	 Shift + Text /
 PBC	 Picture / Format
 Vol-	 Vol-
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Setup	 Setup / OPT /
 Return	 Back / Return
 Source	 AV / Input / RDS
 Tv/Radio	 TV/Radio /
 Up	 Up
 Down	 Down
 Enter	 OK





Originale	Sostituto
REV <<	TUNE- << / Tune-
FAV- Right/FAV+	Right
FWD >>	TUNE+ >> / Tune+
PREV I<<	PRESET- I<< / Preset-
FAV- Left/FAV-	Left
NEXT >>I	PRESET+ >>I / Preset+
3D 3D	SHIFT + CD- STB 3 Shift + 3
SUBTITLE Subtitle	EQ SUBTITLE Subtitle / EQ
ZOOM Zoom	SIZE ZOOM Zoom / Size
MODE Mode	LIST SMART Smart / List
DIGEST Digest	PC FAV MARKER Fav / Marker / PC
LANGUAGE Language	LANG I/II AUDIO Audio / Lang I/II
P/N P/N	TIMER SLEEP Sleep / Timer
REPEAT Repeat	APP REPEAT Green / APP / Repeat
L/R L/R	TOP MENU D.MENU D.Menu / Top
A-B A-B	YouTube REPEAT A-B Yellow / YouTube / Repeat
ANGLE Angle	ANGLE INFO Info / Angle

Originale	Sostituto
SLOW Slow	SHIFT + SLOW Shift + Play /

