 

 
 



 
 


 
 
 

 
 

 
 

 

 
 
 

 

 



 


 


 
 
 

 
 



 



 



 


 

 
 

 

 
 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		0		0
	Mute		Mute		Menu		Menu
	FAV		Pre Ch		Exit		Exit
	Subtitle		Subt		EPG		Guide
	Info		Info		Goto		AV
	TTX		Text		Up		Up
	Recall		Back		Down		Down
	List		List		Right		Right
	1		1		Left		Left
	2		2		OK		Ok
	3		3		Vol+		Vol +
	4		4		Vol-		Vol -
	5		5		CH+		Ch +
	6		6		CH-		Ch -
	7		7		Pg Up		Smart
	8		8		Pg Dn		Media
	9		9		>>		>>





	Originale	Sostituto	Originale	Sostituto
	<<			<<
	>>			>>
	I<<			I<<
	Play			Play
	Pause			Pause
	Stop			Stop
	Rec			Rec
	Lang			Dual
	Timeshift			Options
	Tv/Radio			TV/R
	Repeat			Shift + Text
	Red/Zoom			Red
	Green			Green
	Yellow			Yellow
	Blue/Timer			Blue
	Aspect			3D
	V-Format			Format

