







 















 









 

 




















Originale	Sostituto
	 Mute / Dimmer
	 Power
	 3
	 8
	 AV / Input / RDS
	 6
	 7
	 Yellow / YouTube / Repeat
	 Subtitle / EQ
	 CH+ / Page+
	 Up
	 Left
	 Vol-
	 Pause / Step / Freeze
	 Play / Slow
	 Right
	 Vol+

Originale	Sostituto
	 CH- / Page-
	 Down
	 Sleep / Timer
	 Display / Media
	 I<< / Preset-
	 << / Tune-
	 >> / Tune+
	 >>I / Preset+
	 TV/Radio /
	 Green / APP / Repeat
	 Blue / Prime Video / Random
	 Stop / Hold

