








 










Originale	Sostituto
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	P<P
0	0
	Menu / Home
	Info / Angle
	Audio / Lang I/II

Originale	Sostituto
	Mute / Dimmer
	Left
	Up
	Right
	OK
	Down
	Vol-
	Vol+
	CH- / Page-
	CH+ / Page+
	Red / Netflix / Search
	Sound / Title
	Green / APP / Repeat
	Picture / Format
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto





	Originale	Sostituto	
	[≡o]	 Sleep / Timer	
	Hold	 Stop / Hold	
	[≡X]	 Exit / Cancel / Clear	
	Mix / PIP Swap	 Smart / List	
	PIP / Size	 Zoom / Size	
	PIP Down / [≡?]	 I<< / Preset-	
	PIP Up / Index	 >>I / Preset+	
	[TV]	 TV/Radio /	
	[AV]	 AV / Input / RDS	

	Originale	Sostituto

