



 

 

 



 

 

 



 
 

 

 





 



















 





 

 

 

 





 
 
 


 
 
 

 
 

 

 



 

 



 

 

 

Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Originale	Sostituto
 Vol +	 Vol+
 MTS	 Info / Angle
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Aspect	 Shift + Picture / Format
 CH -	 CH- / Page-
 Guide	 Guide / EPG / -/-
 Home	 Shift + Menu /
 Rec	 Rec / Rec Mode
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down





Originale	Sostituto
 Display	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 << / Index	 << / Tune-
 Play/Pause /	 Pause / Step / Freeze
 Play/Pause /	 Shift + Exit / Cancel / Clear
 Play/Pause /	 Play / Slow
 >> / TTX	 >> / Tune+
 >> / TTX	 Text / Goto
 I<< / SUB.PG	 I<< / Preset-
 >>I / Reveal	 >>I / Preset+
 Stop / Mix	 Stop / Hold
 CAP	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 TV / Radio	 TV/Radio /

Originale	Sostituto
 FAV	 Fav / Marker / PC
 Size / Mouse	 Zoom / Size
 Hold / Refresh	 Shift + Stop /

