



 

 

 



 

 

 



 
 

 

 





 



















 





 

 

 

 







Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Originale	Sostituto
 Vol +	 Vol+
 MTS	 Info / Angle
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Aspect	 Shift + Picture / Format
 CH -	 CH- / Page-
 Guide	 Guide / EPG / -/-
 Home	 Shift + Menu /
 Rec	 Rec / Rec Mode
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down





Originale	Sostituto
DISPLAY	MEDIA DISPLAY Display / Media
	NETFLIX SEARCH Red / Netflix / Search
	APP REPEAT Green / APP / Repeat
	YouTube REPEAT A-B Yellow / YouTube / Repeat
	Prime Video RANDOM Blue / Prime Video / Random
INDEX << / Index	TUNE- << / Tune-
CANCEL Play/Pause /	STEP-FREEZE Pause / Step / Freeze
CANCEL Play/Pause /	SHIFT + CLEAR EXIT Shift + Exit / Cancel / Clear
CANCEL Play/Pause /	SLOW Play / Slow
TTX >> / TTX	TUNE+ >> / Tune+
TTX >> / TTX	GOTO TEXT Text / Goto
SUB_PG I<< / SUB.PG	PRESET- I<< / Preset-
REVEAL >>I / Reveal	PRESET+ >>I / Preset+
MIX Stop / Mix	HOLD Stop / Hold
	TOP MENU D.MENU D.Menu / Top
	EQ SUBTITLE Subtitle / EQ
	PROGRAM TV/RADIO TV/Radio /

Originale	Sostituto
	PC FAV MARKER Fav / Marker / PC
	SIZE ZOOM Zoom / Size
	SHIFT + HOLD Shift + Stop /

