






























Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Media	 Display / Media
 Portal	 Shift + Menu /
 Help	 Shift + Info / Angle
 Menu	 Menu / Home
 Up	 Up

Originale	Sostituto
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Guide	 Guide / EPG / -/--
 i	 Info / Angle
 Vol +	 Vol+
 Back	 Back / Return
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Filelist	 Smart / List
 CH -	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Originale	Sostituto	Originale	Sostituto
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Rec	 Rec / Rec Mode		
 I<<	 I<< / Preset-		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 >>	 >> / Preset+		
 TV / Radio	 TV/Radio /		
 Audio	 Audio / Lang I/II		
 Subt	 Subtitle / EQ		
 TTX	 Text / Goto		
 Timer	 Shift + Sleep / Timer		
 Sleep	 Sleep / Timer		

Originale	Sostituto	Originale	Sostituto

