














































 






 


 









 


 




 


Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search




 




















 







Originale	Sostituto	Originale	Sostituto
 Green / >>>	 >>> / Tune+		
 Green / >>>	 Green / APP / Repeat		
 Yellow / I<<<	 I<<< / Preset-		
 Yellow / I<<<	 Yellow / YouTube / Repeat		
 Blue / >>>I	 >>>I / Preset+		
 Blue / >>>I	 Blue / Prime Video / Random		
 Text / Play/Pause	 Text / Goto		
 Text / Play/Pause	 Play / Slow		
 Text / Play/Pause	 Pause / Step / Freeze		
 Stop / Still	 Stop / Hold		
 Radio	 TV/Radio /		
 Size / Aspect	 Picture / Format		
 Size / Aspect	 Zoom / Size		
 [≡x]	 Eject / Surround		
 Subtitle / [≡o]	 Subtitle / EQ		
 DMP	 D.Menu / Top		
 Rec	 Rec / Rec Mode		







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 ♥	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 ♥	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-





	Originale	Sostituto	Originale	Sostituto
	Green	Green / APP / Repeat		
	>>	>> / Tune+		
	Yellow	Yellow / YouTube / Repeat		
	I<<	I<< / Preset-		
	Blue	Blue / Prime Video / Random		
	>>I	>>I / Preset+		
	[=]	Text / Goto		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	[=+]	Shift + Stop /		
	Stop/Still	Stop / Hold		
	Radio	TV/Radio /		
	[=◇]/[++]	Zoom / Size		
	[=x]	Eject / Surround		
	[=o]/Subtitle	Subtitle / EQ		
	DMP	D.Menu / Top		
	Rec	Rec / Rec Mode		

