







 

 








 

Originale	Sostituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Cancel	Shift + Exit / Cancel / Clear
Audio	Audio / Lang I/II
Open/Close	Eject / Surround
PIP	Picture / Format
Internet	Smart / List
Audio	Sound / Title

Originale	Sostituto
<< Search	<< / Tune-
Play	Play / Slow
Search >>	>> / Tune+
I<< Skip	I<< / Preset-
Pause	Pause / Step / Freeze
Skip >>I	>>I / Preset+
Stop	Stop / Hold
Exit	Exit / Cancel / Clear
Status	Info / Angle
Option	Setup / OPT /
Return	Back / Return
Top Menu	D.Menu / Top
Home	Menu / Home
Pop-Up Menu	Display / Media
Up	Up
Down	Down
Right	Right



Secondary



Originale	Sostituto	Originale	Sostituto
 Left	 Left		
 OK	 OK		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Tv Vol+	 Vol+		
 Power TV	 Shift + Power		
 Tv Vol-	 Vol-		
 AV Input TV	 AV / Input / RDS		

