




Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause/[≡]	 Pause / Step / Freeze
 Stop/[≡+]	 Stop / Hold
 Rec/[≡◆]	 Rec / Rec Mode
 <</[≡o]	 << / Tune-
  <</[≡i]	  << / Preset-
 >> /[≡?]	 >>  / Preset+
 >> /[≡x]	 >> / Tune+
 Info	 Info / Angle
 OI/II/Audio	 Audio / Lang I/II
 [≡]	 Text / Goto
 ←/<x]	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3

Originale	Sostituto
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 *	 Setup / OPT /
 0	 0
 ▲	 Up
 [→]	 AV / Input / RDS
 ◀	 Left
 OK	 OK
 ▶	 Right
 ▼	 Down
 NETFLIX	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 +	 Vol+





Originale		Sostituto		Originale		Sostituto	
	Home / Source		Menu / Home				
	P+		CH+ / Page+				
	Vol-		Vol-				
	P-		CH- / Page-				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	EPG		Guide / EPG / -/--				
	List		Smart / List				
	Q.Menu		D.Menu / Top				





Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
Play	Play / Slow
Pause [ /≡ ]	Pause / Step / Freeze
Stop/[≡+]	Stop / Hold
Rec/[≡◆]	Rec / Rec Mode
<</[≡o]	<< / Tune-
<</[≡i]	<< / Preset-
>> /[≡?]	>>  / Preset+
>>/[≡x]	>> / Tune+
Info	Info / Angle
O /II/Audio	Audio / Lang I/II
[≡]	Text / Goto
←/<x]	Fav / Marker / PC
1	1
2	2
3	3

Originale	Sostituto
4	4
5	5
6	6
7	7
8	8
9	9
*	Setup / OPT /
0	0
[→]	AV / Input / RDS
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Netflix	Shift + Red / Netflix /
YouTube	Shift + Yellow / YouTube /
Vol+	Vol+





Originale	Sostituto
Home/Source	Menu / Home
P+	CH+ / Page+
Vol-	Vol-
P-	CH- / Page-
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
EPG	Guide / EPG / -/--
List	Smart / List
Q.Menu	D.Menu / Top

Originale	Sostituto

