




Originale	Sostituto
 Power	 Power
 Contrast	 Options
 Audio	 Shift + Dual
 O<->O	 TV/R
 Input	 AV
 I+	 Info
 Timer	 Shift + AV
 I / II	 Dual
 Red / Text	 Red
 Green / Subtitle	 Green
 Green / Subtitle	 Subt
 Yellow / PIP Swap / A/B	 Yellow
 Blue	 Blue
 Picture	 Menu
 Recall	 Pre Ch
 Up / P +	 Up
 Up / P +	 Ch +

Originale	Sostituto
 Down / P -	 Down
 Down / P -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 OK	 Ok
 Mute	 Mute
 Aspect	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Originale	Sostituto	Originale	Sostituto
9	9	9	9
0	0	0	0
[Text Icon]	Text	[REPEAT TEXT]	Text
[PIP Icon]	PIP	[E-MANUAL D.MENU]	D. Menu
[Freeze Icon]	Freeze	[Stop Icon]	Stop
[Cancel Icon]	Cancel	[RETURN BACK]	Back
[List Icon]	List	[DISC NAV LIST]	List
[Text Cancel Icon]	Text Cancel	[CLEAR EXIT]	Exit
[Text Hold Icon]	Text Hold	[Pause Icon]	Pause
[Text Index Icon]	Text Index	[GUIDE]	Guide
[Text Size Icon]	Text Size	[ECO 3D]	3D
[Text Reveal Icon]	Text Reveal	[SHIFT] + [SETTINGS OPT]	Shift + Options
[Mix Icon]	Mix	[SHIFT] + [REPEAT TEXT]	Shift + Text

Originale	Sostituto

