








Originale	Sostituto
Power	Power
TV / Video	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
/--	GUIDE Guide
Quick	PRE-CH Pre Ch
Mute	Mute
Sleep	SLEEP Sleep
Skip	EXIT Exit

Originale	Sostituto
Display	Info
Up / Prog +	Ch +
Up / Prog +	Up
Down / Prog -	Ch -
Down / Prog -	Down
Right / Vol +	Vol +
Right / Vol +	Right
Left / Vol -	Vol -
Left / Vol -	Left
Menu	Menu
Menu	Ok
P-STD	Shift + Format
S-STD	Dual
PC Auto ADJ	Smart
PC / TV/PC	Media
M / S	TV/R
Surround	Shift + Dual





Originale		Sostituto	
 Wide	 Format		
 OSD Position	 3D		
 OSD Language	 Shift + 3D		
 Setup	 Options		
 Red	 Red		
 Green	 Green		
 List / FLOF	 List		
 Yellow	 Yellow		
 Blue	 Blue		
 Mix	 Shift + Text		
 Index	 Shift + Info		
 TV / Text	 Text		
 Cancel	 Back		
 Subpage	 Subt		
 Reveal	 Play		
 Page -	 I<<		
 Page +	 >>I		

Originale		Sostituto	
 Size	 Eject		
 Hold	 Stop		
 Store	 Shift + Smart		

