

 

 
 


 







 

 

 
 


 
 

 
 
 
 
 
 
 

 
 


 
 
 


 
 
 

 
 
 

 
 
 
 

 
 

 




 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		CH +		Ch +
	Info		Info		CH -		Ch -
	3D		3D		Index		Media
	ANT		D. Menu		FAV		Pre Ch
	Mute		Mute		Vol +		Vol +
	1		1		Vol -		Vol -
	2		2		Menu		Menu
	3		3		Exit		Exit
	4		4		Up		Up
	5		5		Right		Right
	6		6		Down		Down
	7		7		Left		Left
	8		8		Enter		Ok
	9		9		List / Repeat		List
	0		0		List / Repeat		Shift + Text
	Reveal / Source		AV		EPG		Guide
	Audio I/II		Dual		www		Smart





Originale	Sostituto	Originale	Sostituto
Rec	Rec	Still	Shift + Stop
Play	Play	Radio	TV/R
Pause	Pause	[≡X]	Shift + Exit
Stop	Stop		
<<	<<		
>>	>>		
Aspect / Size	Format		
[≡o] / Subtitle	Subt		
T-Shift	Options		
Recall	Back		
Red	Red		
Green	Green		
Yellow / I<<	Yellow		
Yellow / I<<	I<<		
Blue / >>I	Blue		
Blue / >>I	>>I		
Text	Text		

