




 

 
 
Originale	Sostituto
 Power	 Power
 TV	 Shift + TV/R
 VCR/AUX	 Shift + Options
 Sleep	 Sleep
 Tv/AV	 AV
 Tuner/Band	 TV/R
 DVD/CD	 Pre Ch
 FL	 Shift + Info
 Play Mode-Mix	 Shift + Play
 Repeat	 Text
 Position	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Originale	Sostituto
 7	 7
 8	 8
 9	 9
 0	 0
 ≥10 / -/-	 Guide
 Cancel	 Exit
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Top Menu/Direct Navigator	 Media
 Menu/Play List	 Menu
 Display	 Info
 Return	 Back





Originale	Sostituto
	 Up
	 Down
	 Right
	 Left
	 Ok
	 Vol +
	 Vol -
	 Mute
	 Options
	 Subt
	 List
	 Red
	 Green
	 Yellow
	 Smart
	 Format
	 Eject

Originale	Sostituto
	 Blue
	 Dual





Originale

Originale	Sostituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
≥10 / -/-	GUIDE
Tv/AV	AV
CH+	Ch +
CH-	Ch -
Tv Vol+	Vol +
Tv Vol-	Vol -

Originale

Originale	Sostituto

Sostituto





Originale	Sostituto
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	≥10 / -/-
	>>
	<<
	<<
	>>
	Pause

Originale	Sostituto
	Play
	Stop

