



 


 
 
 
 

 

 



 
 
 
 
 
 
 
 

 










Originale	Sostituto
 Power	 Power
 Select Drive	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Last View	 Pre Ch
 Radio/TV	 TV/R
 CH/Page+	 Ch +
 CH/Page-	 Ch -
 Internet	 Smart

Originale	Sostituto
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause/Pause Live	 Pause
 Play/x1.3	 Play
 i/Status	 Info
 X/Exit	 Exit
 Option	 Options
 Return/Back	 Back
 Direct Navigator/Pop Up	 List
 Guide	 Guide
 Function Menu	 Menu
 Up	 Up
 Down	 Down
 Right/II>	 Right



