

























 










Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/0	 Shift + Guide / EPG / -/0
 0	 0
 Recall	 Back / Return
 Vol +	 Vol+
 Aspect	 Shift + Picture / Format
 Nicam	 Audio / Lang I/II

Originale	Sostituto
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Input	 AV / Input / RDS
 CH -	 CH- / Page-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 PMode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 FAV	 Fav / Marker / PC
 FAV -	 Shift + Down





## Originale

## Sostituto

	FAV +	+	Shift + Up
	EPG		Guide / EPG / -/--
	Text		Text / Goto
	Hold	+	Shift + Stop /
	Lang	+	Shift + Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Index / <<<		<<< / Tune-
	Index / <<<		Info / Angle
	Size / >>>		>>> / Tune+
	Size / >>>		Zoom / Size
	Reveal / I<<<		I<<< / Preset-
	Subpage / >>>		>>>  / Preset+
	Subpage / >>>		Eject / Surround
	Rec		Rec / Rec Mode
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold

## Originale

## Sostituto

	Media	+	Shift + Display / Media
	Red / TV/Radio		TV/Radio /
	Red / TV/Radio		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

