



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Info	Info / Angle
0	0
Recall	Back / Return
PMode	Picture / Format
I / II	Audio / Lang I/II
EPG	Guide / EPG / -/--

Originale	Sostituto
Sleep	Sleep / Timer
Input	AV / Input / RDS
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
FAV	Fav / Marker / PC
Vol +	Vol+
ADD / DEL	Shift + Back / Return
PR +	CH+ / Page+
Vol -	Vol-
Cancel	Shift + Exit / Cancel / Clear
PR -	CH- / Page-
Red	Red / Netflix / Search





Originale	Sostituto	Originale	Sostituto
 Green	 Green / APP / Repeat	 Subpage / Rec	 Rec / Rec Mode
 Yellow	 Yellow / YouTube / Repeat	 Index / List	 Smart / List
 Blue	 Blue / Prime Video / Random		
 Play / Pause	 Play / Slow		
 Play / Pause	 Shift + Play /		
 Stop	 Stop / Hold		
 Setup	 Setup / OPT /		
 Eject	 Eject / Surround		
 I<< / Text	 Shift + I<< / Preset-		
 I<< / Text	 I<< / Preset-		
 <<	 << / Tune-		
 Size	 Zoom / Size		
 S. Title M.	 Sound / Title		
 >>I / Hold	 >>I / Preset+		
 >>I / Hold	 Shift + >>I / Preset+		
 >> / Reveal	 >> / Tune+		
 Subpage / Rec	 Shift + Rec / Rec Mode		

