











 


 




 





 

 
 



 



 

 












 







 






 


 






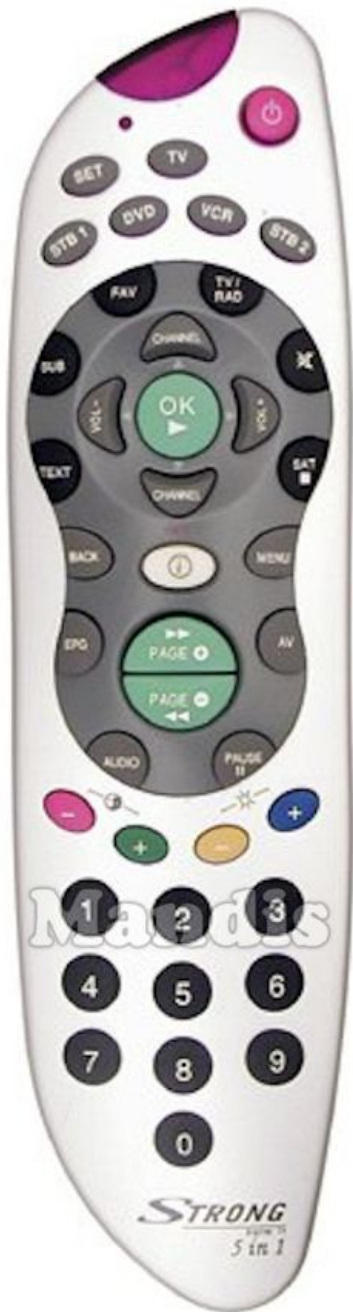


Originale	Sostituto
 Power	 Power
 FAV	 Pre Ch
 TV / RAD	 TV/R
 SUB	 Subt
 Mute	 Mute
 Up / Channel +	 Up
 Up / Channel +	 Ch +
 Down / Channel -	 Down
 Down / Channel -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 OK / Play	 Ok
 OK / Play	 Play
 Text	 Text
 Sat / Stop	 Media

Originale	Sostituto
 Sat / Stop	 Stop
 Back	 Back
 Menu	 Menu
 i / Rec	 Info
 i / Rec	 Rec
 EPG	 Guide
 Page + / >>	 >>
 Page - / <<	 <<
 AV	 AV
 Audio	 Dual
 Pause	 Pause
 Red / Contrast -	 Red
 Green / Contrast	 Green
 Yellow / Brightness -	 Yellow
 Blue / Brightness	 Blue
 1	 1
 2	 2





Originale		Sostituto	
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originale		Sostituto	

