



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TV / R	TV/Radio /
Home	D.Menu / Top
FAV	Fav / Marker / PC
Back	Back / Return
Audio	Audio / Lang I/II

Originale	Sostituto
Info	Info / Angle
EPG	Guide / EPG / -/-
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Vol +	Vol+
Vol -	Vol-
P +	Shift + CH+ /
List	Smart / List
P -	Shift + CH- /
CH +	CH+ / Page+
USB	Shift + 8
Text	Text / Goto



