







 
 






















 
 





Originale	Sostituto
	TV / Radio / 
	Shift +  +  Shift + 1
	Audio / Lang I/II 
	AV / Input / RDS 
	Power 
	1 
	2 
	3 
	Text / Goto 
	4 
	5 
	6 
	Subtitle / EQ 
	7 
	8 
	9 
	Sound / Title 

Originale	Sostituto
	Fav / Marker / PC 
	0 
	Info / Angle 
	Setup / OPT / 
	Exit / Cancel / Clear 
	Up 
	Smart / List 
	Left 
	OK 
	Right 
	Vol+ 
	Down 
	CH+ / Page+ 
	Vol- 
	Mute / Dimmer 
	Back / Return 
	CH- / Page- 





Originale		Sostituto		Originale	Sostituto
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	EPG		Guide / EPG / -/--		
	Check		Display / Media		

