


Originale	Sostituto	Originale	Sostituto
	Power		Return
	Open / Close		Back
	Stop		Subt
	Pause		Audio
	Play		Dual
	I<< Skip		Angle
	>>I Skip		Format
	<< Search / Slow		Pre Ch
	>> Search / Slow		1
	Menu		Shift + Play
	Up		Shift + Text
	Left		Exit
	Select		A-B Repeat
	Right		Text
	Down		2
	Title		3
	Display		4
			5
			6
			7
			8

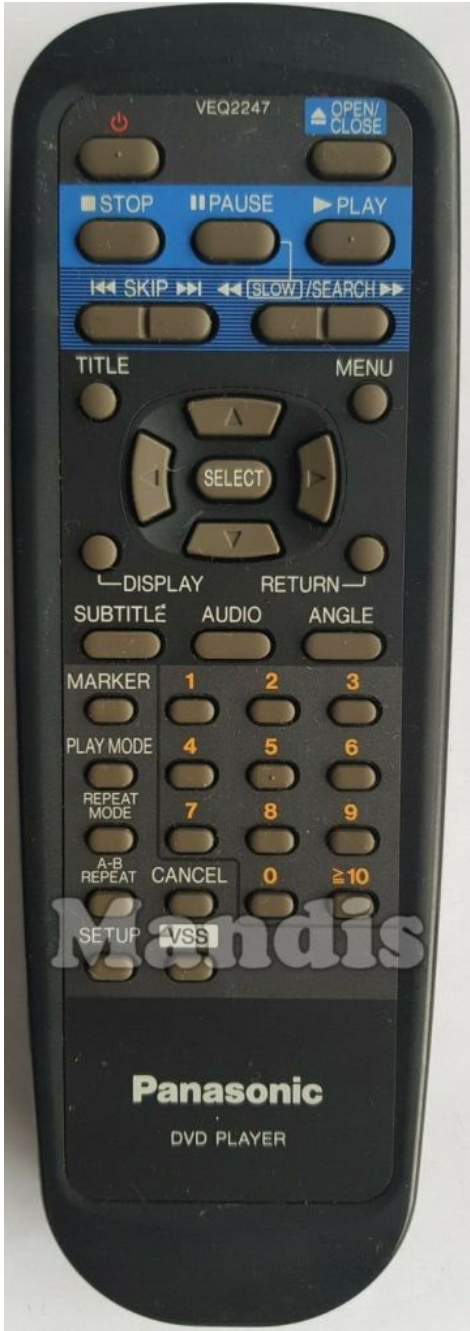



Originale	Sostituto	Originale	Sostituto
	9		9
	0		0
	>≧ 10		Guide
	Setup		Options
	VSS		Media

Originale	Sostituto

