




 

 

 

 












 

 









 











 

 
 
 
 
 

 
 
 
 
 

 
 






Originale	Sostituto
 STB Power	 Power
 Mute	 Mute
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Recall	 Back
 Up / CH +	 Up
 Down / CH -	 Down

Originale	Sostituto
 Right / Vol +	 Right
 Left / Vol -	 Left
 OK	 Ok
 Up / CH +	 Ch +
 Down / CH -	 Ch -
 Right / Vol +	 Vol +
 Left / Vol -	 Vol -
 Menu	 Menu
 EPG	 Guide
 FAV	 Pre Ch
 Exit	 Exit
 Subt	 Subt
 Info	 Info
 TTX	 Text
 TV / Radio	 TV/R
 Page -	 Shift + Down
 Page +	 Shift + Up





Originale		Sostituto		Originale		Sostituto	
	V-Format		Format		TV CH -		Shift + Ch -
	PVR		Media		TV CH +		Shift + Ch +
	Red		Red		TV OK		Shift + Ok
	Green		Green		TV Source		AV
	Yellow		Yellow				
	Blue		Blue				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Rec		Rec				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	TV Power		Shift + Power				
	TV Vol -		Shift + Vol -				
	TV Vol +		Shift + Vol +				

