

 


 

 

 





 


 

 

 













Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 GUIDE
 Recall	 BACK
 Vol +	 Vol +
 Vol -	 Vol -
 Nicam	 SMART

Originale	Sostituto
 Display	 Info
 CH +	 Ch +
 CH -	 Ch -
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 LCD Menu	 Menu
 Exit	 Exit
 Input	 AV
 PMode	 Shift + Format
 SMode	 Shift + Dual
 Sleep	 Sleep
 Fav	 Pre Ch
 Fav -	 Shift + Down
 Fav +	 Shift + Up



