





 

 

 



 



 

 

 





 





Originale	Sostituto
	 Power
	 Shift + 2
	 Shift + 4
	 Sound / Title
	 Menu / Home
	 Display / Media
	 Eject / Surround
	 CH+ / Page+
	 Up
	 AV / Input / RDS
	 Left
	 OK
	 Setup / OPT /
	 Right
	 Back / Return
	 CH- / Page-
	 Down

Originale	Sostituto
	 Exit / Cancel / Clear
	 Green / APP / Repeat
	 Zoom / Size
	 Audio / Lang I/II
	 Subtitle / EQ
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 Stop / Hold
	 TV/Radio /
	 Text / Goto
	 Fav / Marker / PC
	 Red / Netflix / Search
	 Rec / Rec Mode





Originale		Sostituto	
	Speed / Angle		Info / Angle
	TV / VCR		Smart / List
	1 / Tracking -		1
	1 / Tracking -		Vol-
	2		2
	3 / Tracking +		3
	3 / Tracking +		Vol+
	4		4
	5		5
	6		6
	System		D.Menu / Top
	7		7
	8		8
	9		9
	0		0

Originale		Sostituto	

