



Originale	Sostituto
Power	Power
Dimmer	Dual
Mute	Mute
Preset Up	Ch +
Preset Down	Ch -
USB	Media
Function	Smart
Volume +	Vol +
Volume -	Vol -
Sleep	Sleep
Play / Pause	Play
Play / Pause	Pause
I<<< / <<< / Tun -	<<<
I<<< / <<< / Tun -	I<<<
Stop	Stop
>>>I / >>> / Tun +	>>>
>>>I / >>> / Tun +	>>>I

Originale	Sostituto
Repeat	Text
D.Skip	Exit
Program /	Options
Deck Play	Left
Deck Play	Right
Deck Play	Shift + Play
Deck <<<	Down
Deck <<<	Shift + <<<
Deck >>>	Up
Deck >>>	Shift + >>>
Deck Rec / Pause	Shift + Rec
Deck Stop	Ok
Deck Stop	Shift + Stop
EQ Patt.	Red
XDSS	Green
SURRE.	Yellow
OAO	Blue





Originale	Sostituto	Originale	Sostituto
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
INFO	MP3 Info		

