
 

 









 



 




 
 





Originale	Sostituto
 Power	 Power
 TV/AV	 AV
 Mute	 Mute
 PgUp	 Ch +
 PgDn	 Ch -
 Nothing 1	 Smart
 Nothing 2	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 Tv/Radio	 TV/R
 Recall	 Back
 EPG	 Guide
 Pause	 Pause
 [+]	 3D
 PAL/NTSC	 Format
 PR+/Up	 Up
 PR-/Down	 Down
 Right	 Right
 Left	 Left
 OK/List	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Exit	 Exit
 FAV	 Pre Ch
 Info	 Info





Originale		Sostituto		Originale		Sostituto	
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue/Audio		Blue				
	Audio		Dual				
	TXT		Text				
	Sub.		Subt				
	Record		Rec				
	<<		<<				
	>>		>>				
	Play		Play				
	Stop		Stop				
	< Seek		I<<				
	Seek >		>>I				
	Nothing 3		Eject				

