









 



 

 







































 



 











Originale		Sostituto		Originale		Sostituto	
	Power		Power		1		1
	Tv System		TV/Radio /		2		2
	Mute		Mute / Dimmer		3		3
	Rec		Rec / Rec Mode		4		4
	Browser		Smart / List		5		5
	Timer		Sleep / Timer		6		6
	Copy		D.Menu / Top		7		7
	Guide		Guide / EPG / -/-		8		8
	Vol-		Vol-		9		9
	Up		Up		0		0
	Vol+		Vol+		Goto		Text / Goto
	Left		Left		Slow		Shift + Play /
	Enter		Shift + OK		Option		Shift + Setup / OPT / Tools
	Right		Right		Play		Play / Slow
	Return		Back / Return		Stop		Stop / Hold
	Down		Down		Pause/Step		Pause / Step / Freeze
	Setup		Setup / OPT /		I<</Prev		I<< / Preset-



Tools

