








 







 



 



 



 

 






Originale	Sostituto
 Power	 Power
 AV	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / 10	 0
 - / - / + 10	 GUIDE Guide
 Recall	 PRE-CH Pre Ch
 Reveal	 FORMAT Format
 Size	 Eject
 Mix	 Shift + Text

Originale	Sostituto
 Cancel	 Exit
 Timer	 Shift + AV
 Index	 Info
 Text	 Text
 Sleep	 Sleep
 Status	 Smart
 Mute	 Mute
 Red / OK	 Red
 Red / OK	 Ok
 Green / P.P	 Green
 Yellow / ANA	 Yellow
 Blue	 Blue
 Up / P+	 Up
 Up / P+	 Ch +
 Down / P-	 Down
 Down / P-	 Ch -
 Left / V-	 Left





Originale	Sostituto
 Power	 Power
 Eject	 Eject
 1	 1
 2	 2
 3	 3
 7	 7
 8	 8
 9	 9
 0/10	 0
 -/-- / +10	 GUIDE Guide
 Angle	 PICTURE FORMAT Format
 Zoom	 SHIFT + ZOOM Shift + Eject
 Program	 PROG SLEEP Sleep
 Memory	 FAV PRE-CH Pre Ch
 Up	 Up
 Left	 Left
 Right	 Right

Originale	Sostituto
 Down	 Down
 Setup	 SETTINGS OPT Options
 Enter	 OK Ok
 Return	 RETURN BACK Back
 Slow	 SHIFT + PLAY MODE Shift + Play
 Step	 SHIFT + PAUSE Shift + Pause
 Sub-T	 AD SUBT Subt
 Clear	 CLEAR EXIT Exit
 Chann	 APP MEDIA Media
 A-Time	 REPEAT TEXT Text
 I<<	 I<<
 >>I	 >>I
 Play	 PLAY MODE Play
 Pause	 Pause
 <<	 <<
 >>	 >>
 Stop	 Stop

